

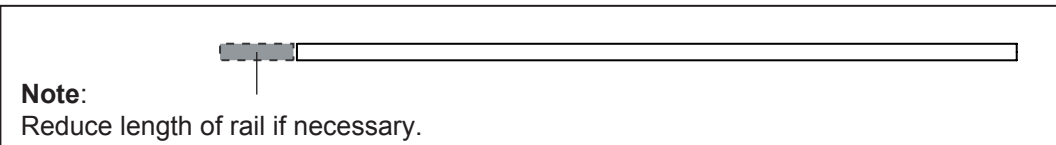


Set - Urban Slide I

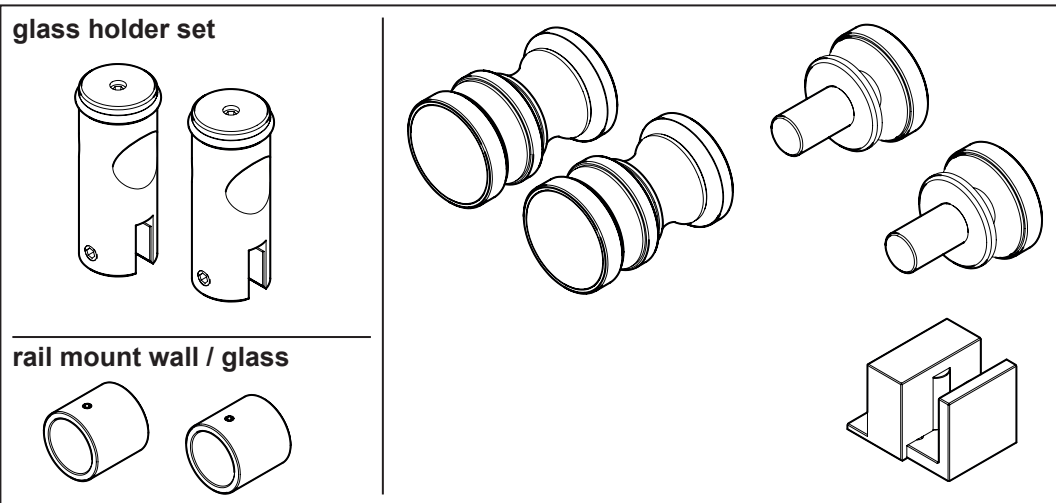

Optional

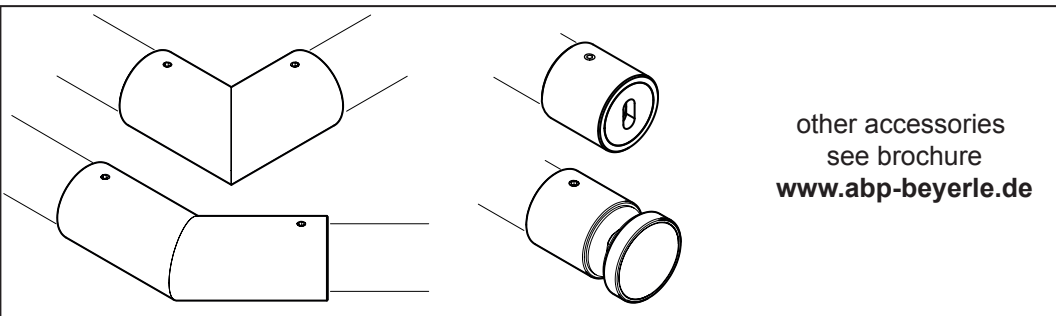

Comply with all general safety regulations when installing the sliding door fittings!
Installation to be completed by qualified licensed contractor.



! Be sure to tighten all screw connections one week after starting to use the sliding door fittings!
Never use scouring agents to clean the sliding door fittings; rather use commercially available stainless steel cleaners!



Beyerle US L.L.C.
5126 S Royal Atlanta Dr., Tucker, GA 30084
Phone (770) 349 - 6324, Fax (770) 934 - 3384, mail: info@beyerle-us.com, www.beyerle-us.com

Installation instructions Urban Slide I

Shower- sliding door fittings for glass doors (1/4" - 1/2" thickness)

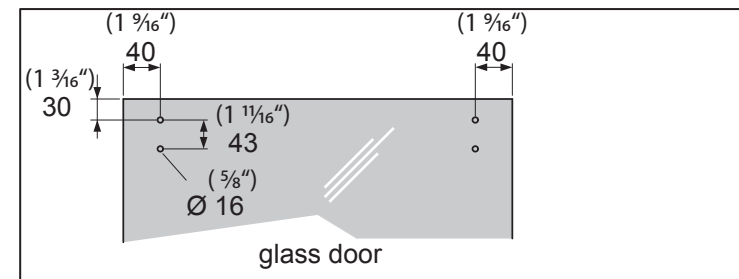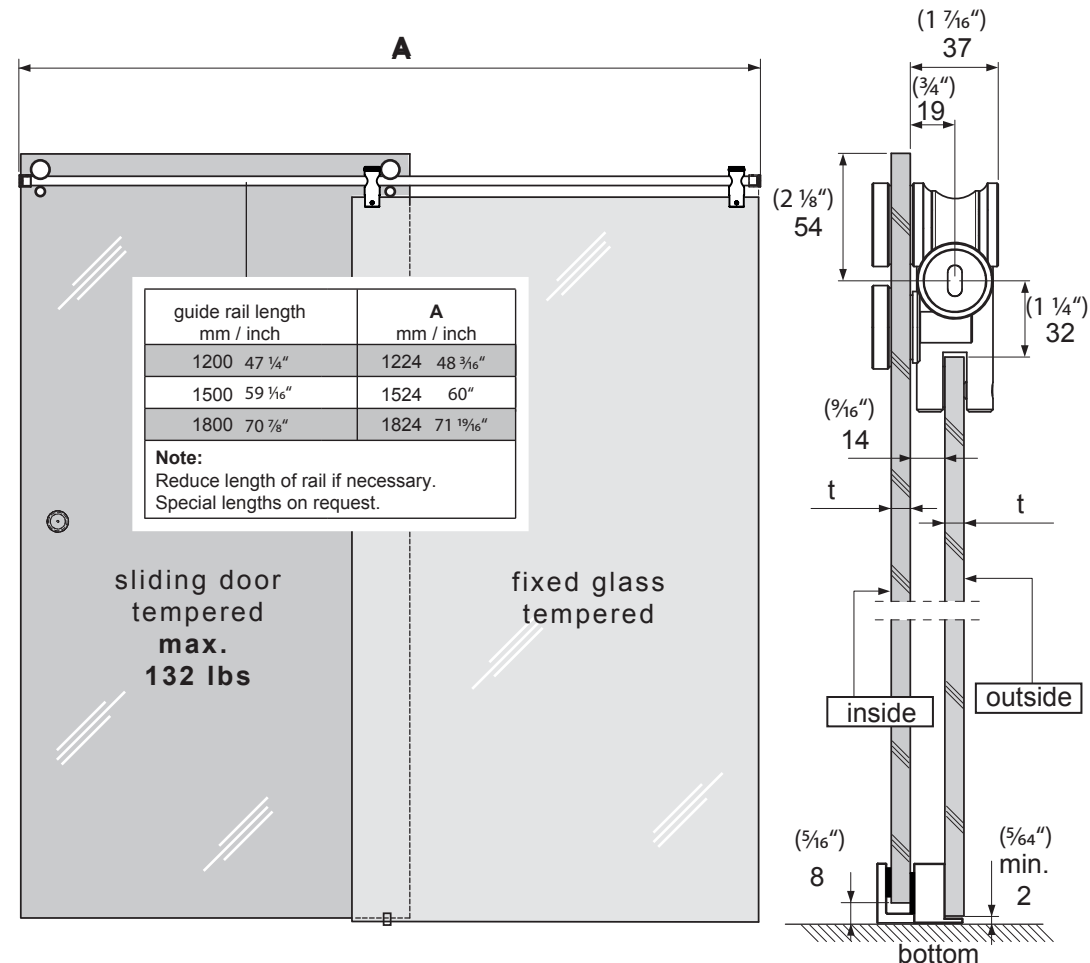

65 30 00.0042_Urban_1_US_2016_03jb

(inch)
© by ABP-Beyerle GmbH - technical amendments reserved - all dimensions in (mm)



Urban Slide I

